

SONY RDR-HX900 Basic Operating Instructions

Recording to Hard Disk Drive (HDD)

- Press HDD Button on front of unit if not lit
- Check your routing on the Video Commander to the proper program to record
- Select the INPUT SOURCE (Under the front flip down panel of unit)
- Select your recording mode (p. 45) Remember DVD Recording time equals **QUALITY!**

RECORDING MODE	RECORDING TIME (Hours)	
	HDD	DVD
HQ (High Quality)	33	1
HSP	51	1.5
SP (Standard Mode)	67	2
LP	103	3
EP	137	4
SLP (Long Duration)	204	6

- Press REC on the front of the unit.
- To use the Quick Timer Mode – Push REC repeatedly
- Or press Stop when finished

Recording to DVD

- Press DVD Button on front of the unit.
- Insert a blank DVD disk. Unit will now format the disc if necessary. You can also record to a disc that has not been finalized if empty space is available.
- Check your routing on the Video Commander to the proper program to record
- Select the INPUT SOURCE (Under the front flip down panel of unit) For Dubbing from HDD to DVD, see the steps below.
- Select your recording mode (p. 45) Remember DVD Recording time equals **QUALITY!**
- Press REC on the front of the unit.
- To use the Quick Timer Mode – Push REC repeatedly
- Or press Stop when finished

Dub from HDD to DVD

- Select SYSTEM MENU from remote control
- Select DUBBING from menu
- Select HDD⇒DVD from menu
- Select your titles in order to be recorded to DVD
- Select START from menu

Finalizing a Disc (Please read page 40 of your Operators Manual)

- This is **NECESSARY** for almost all playback equipment out there. The disc probably won't play in your clients machine without this step.
- Press TOOLS while the disc is in the unit
- Select DISC INFO from the menu
- Select FINALIZE from menu
- Select OK from menu